




OWNERS MANUAL
READ AND SAVE THESE INSTRUCTIONS
Premium Outdoor Air Circulator
Model#106569 and 106572

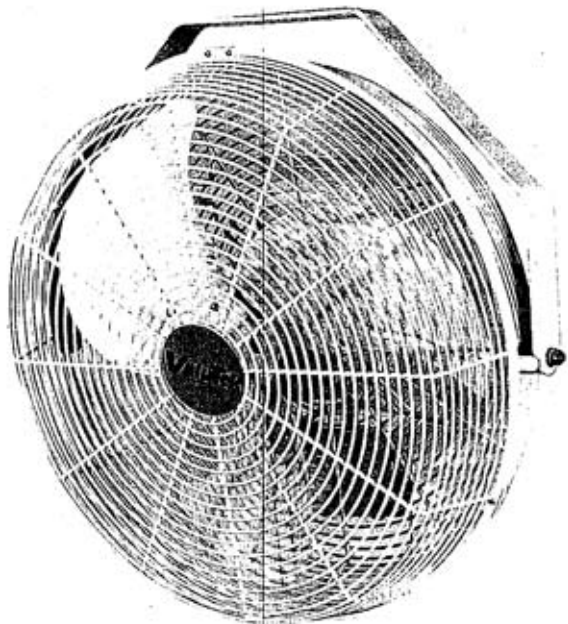

UL#E144918 (HVW-14M and HVW-18M)

FTK106569

Assembly & Operating Instructions

Outdoor Air Circulators

CAUTION: Read and follow all instructions before operating fan. Do not use fan if any part is damaged or missing.

WARNING: To reduce the risk of electrical shock, do not use this fan with any solid state speed control device.

This appliance has a 3-prong grounded plug and must be inserted into a matching grounded GFI outlet for safe operation and to reduce the risk of electrical shock.

Rules for Safe Operation

- Never insert fingers or any other objects through the grill guard when fan is in operation.
- Unplug the fan when moving from one location to another.
- Unplug the fan when removing guards for cleaning.
- Do not use with an extension cord.
- Do not place fan or any parts near an open flame, cooking or other heating appliance.
- DO NOT use fan in windows.

ASSEMBLY INSTRUCTIONS

Wall or Ceiling Mounting - Permanent Mounting Only

- 1) Locate solid wall stud or ceiling beam. Mark the center of the beam. If you do not have a solid structural framing member at that location then you must provide an adequate alternative for mounting the fan.
- 2) Drill pilot hole for 3/8" lag bolt.
- 3) Secure with the hardware provided.

NOTE: Plug fan into a GFI outlet to ensure safety.

OPERATION INSTRUCTIONS

To adjust airflow upward or downward: Tilt the fan head to the desired angle. This high velocity fan can be used alone or in conjunction with air conditioning. Rotating the fan head upward serves to pull air from the floor and circulate it throughout the entire room.

Speed Control: Rotate Switch to Low or High speeds for respective air velocity.

It is normal for the motor to feel warm to touch after continuous operation. This fan features a thermostat that will automatically shut off should it overheat for any reason. If this happens, immediately unplug the fan from the outlet.

CLEANING

WARNING: Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed. Use soft damp cloth then wipe with dry cloth. Do not use harmful cleaners. Do not bend the blades. The motor bearings are permanently sealed and do not require additional lubrication.

WARRANTY

ValuTek warrants every new fan to be free of defects and workmanship, to the extent that, within one year from the date of purchase ValuTek shall either repair or replace at their option, any unit or part thereof, returned to ValuTek freight pre-paid, and found to be defective. Proof of purchase may be required.

This warranty does not include any labor or transportation cost incidental to the removal and re-installation of the unit at the users premises. Components repaired or replaced are warranted through the remainder of the original warranty period only. This warranty applies to the original purchaser-user only; it is null and void in case of alteration, accident, abuse, neglect, and operation not in accordance with instructions.

NOTICE: No warranty claims will be honored by ValuTek unless prior authorization is obtained.



1440 Field of Dreams Way
Dyersville, IA 52040
1-800-327-6835