

PORTABLE AIR BLOWER

ITEM NO. 109648

PORTABLE VENTILATOR OPERATORS MANUAL



READ AND SAVE THESE INSTRUCTIONS

CAUTION: Read and follow all instructions before operating blower. Do not use blower if any part is damaged or missing.

WARNING: This blower has a 3-prong grounded plug and must be inserted into a grounded outlet for safe operation and to reduce the risk of electrical shock. This product can be used indoor or outdoor with a proper GFI outlet.

RULES FOR SAFE OPERATION:

- Never insert fingers or any other objects through the grill guard when blower is in operation.
- Unplug the blower when moving from one location to another.
- Unplug the blower when removing guards for cleaning.
- Be sure the blower is on a stable, flat surface when in operation.
- **DONOT** use blower in windows. For ventilating out a window, use portable ducting.
- Do not alter the blower in any way.
- Ensure grill guards are in place before operating blower.
- Do not block the inlet or the outlet of the blower.
- In case of abnormal noise or smell, **TURN OFF** the blower immediately.
- Ensure the blower is properly grounded.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area and where will not be tripped over period.
- Keep children away from blower.

CAUTION:

- Do not alter the blower's assembly.
- Be sure **FRONT** and **REAR GUARD** screws are completely screwed down in locking position before operation.
- If the supply cord is damaged, it must be replaced by a special cord or service agent or a similarly qualified person in order to avoid hazard and not void warranty.

CLEANING & MAINTENANCE

WARNING: Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed. Use soft damp cloth then wipe with dry cloth. Do not use harmful cleaners. Do not bend the blades. The guard must be kept clean to allow for proper air flow and motor cooling. The blower should be serviced every 200 operating hours and a maintenance log must be maintained to qualify for warranty period.

WARRANTY:

Every new blower is covered by warranty to be free from defects in materials and workmanship, to the extent that, within one year from date of purchasing or within 18 months of the date of manufacturing the blower will either be repaired or replaced at our discretion. This warranty applies to the original purchaser-user only. The warranty is null and void in case of abuse, accident, alteration, neglect in operation and maintenance not in accordance with the instructions. The warranty does not include any labor or transportation cost incidental to removal and re-installation of the unit. No warranty claims will be honored unless prior authorization is obtained from manufacturer. Please call Farmtek at 1-800-327-6835.