


WATERSAVER DIVERTER INSTALLATION INSTRUCTIONS



Install at downspout elbow.



or cut the downspout a minimum of 18" above the rain barrel.

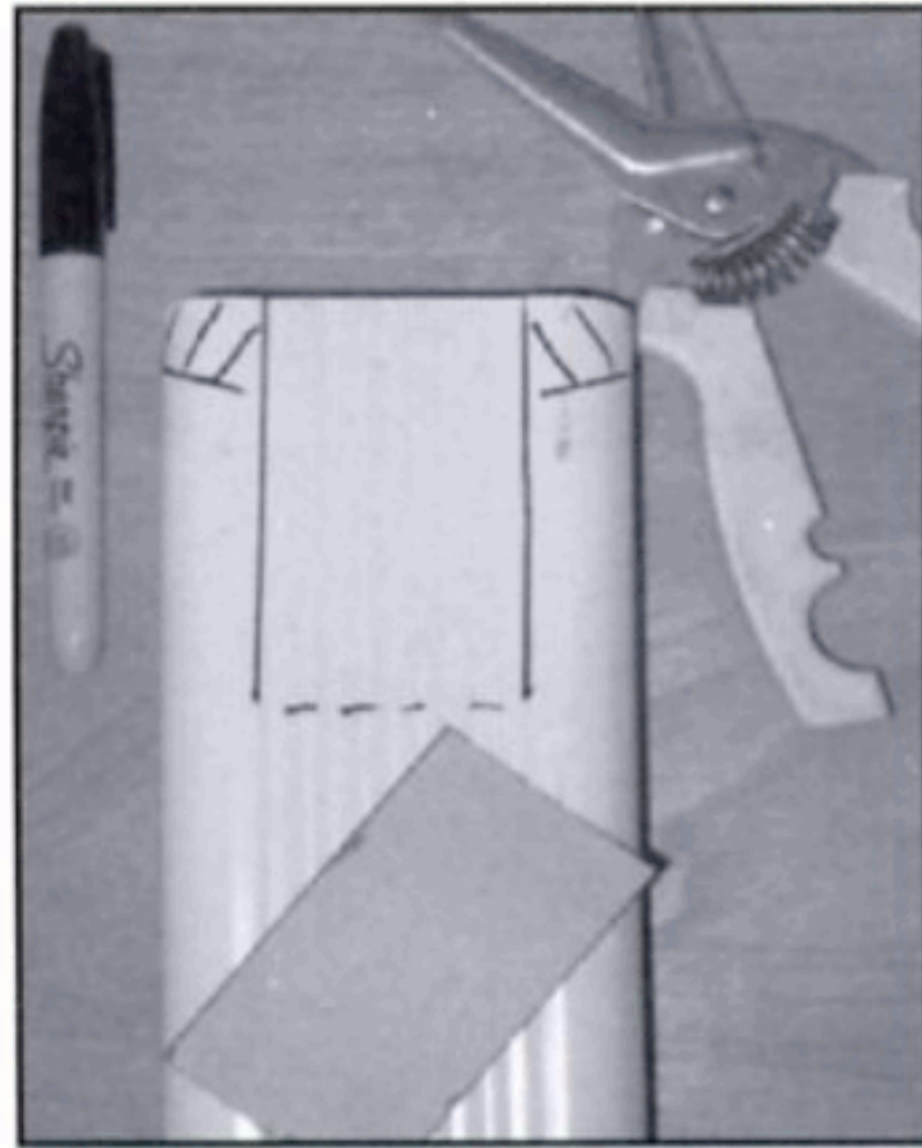

1


Draw two lines 3" long and 1 $\frac{3}{4}$ " apart.
(75 mm long 45 mm apart)

easiest way is to cut a piece of cardboard that size and use it as a template.

2

Cut the tab out using utility scissors.

Remove part of the tab as shown & leave out (or tuck in if desired).

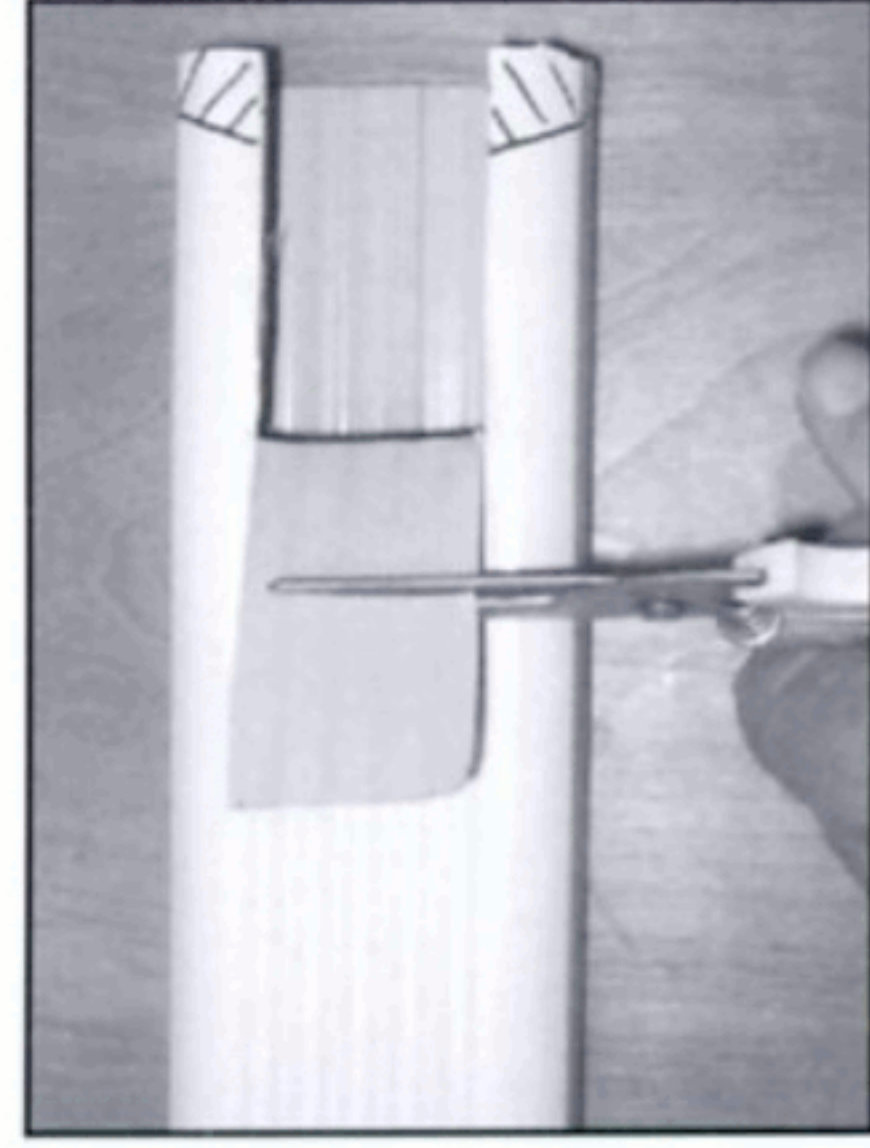


3

Shape the side of the downspout by cutting the angle $\frac{1}{2}$ " to 0".
(12 mm to 0)

4

Slide Diverter into the cut out slot".

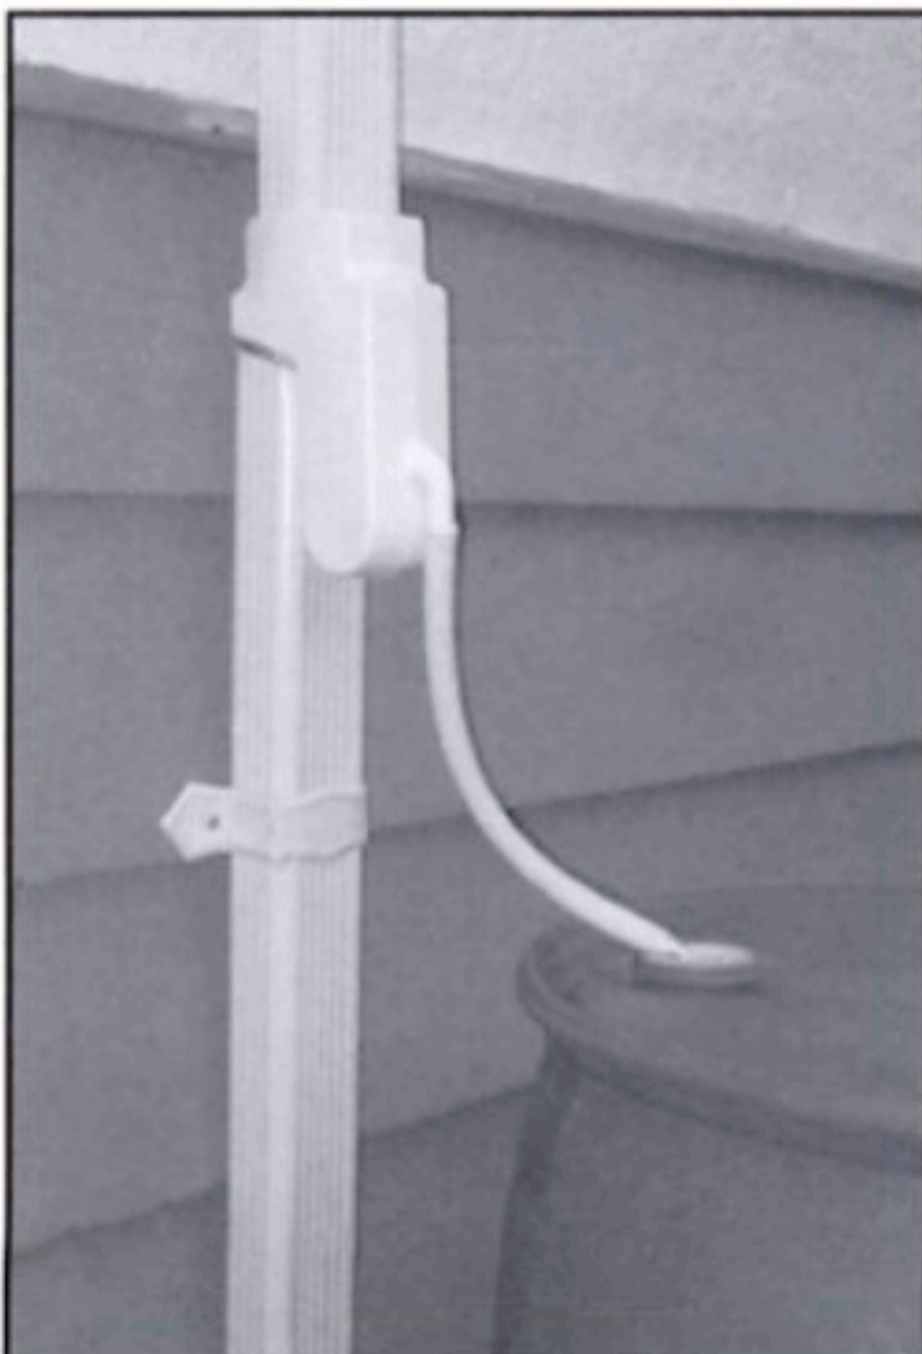

5

Insert upper portion of downspout into the diverter opening.

Downspout tie downs will hold everything in place. Screws are included in the kit if you decide they are needed, simply screw through the diverter into the downspout.

Add the hose and insert into a rain barrel and you are ready to collect water.

For round or small square downspouts simply reduce length of downspout by 4" (10cm) and fit over the Diverter's large spout.

Useful Hits

The Deactivating plug which comes with the kit is used to deactivate the system when rainwater is not needed such as in winter. It can also be used to flush the roof prior to collecting rainwater ie. let it rain for 15-20 minutes prior to adding the hose.

The first time the hose or plug is used it makes it easier if the end is warm waterheated.

