




Fan Hood Installation

NOTE: HOOD CAN BE ASSEMBLED TO FAN BEFORE OR AFTER INSTALLING FAN IN WALL

DIRECTIONS:

1. Slide hood over end of fan housing as shown. Ridge around hood should come to rest around front edge of fan housing.
2. Secure hood to fan using screws provided. Screws should be located approximately 1 1/2" in from edge of hood as indicated.

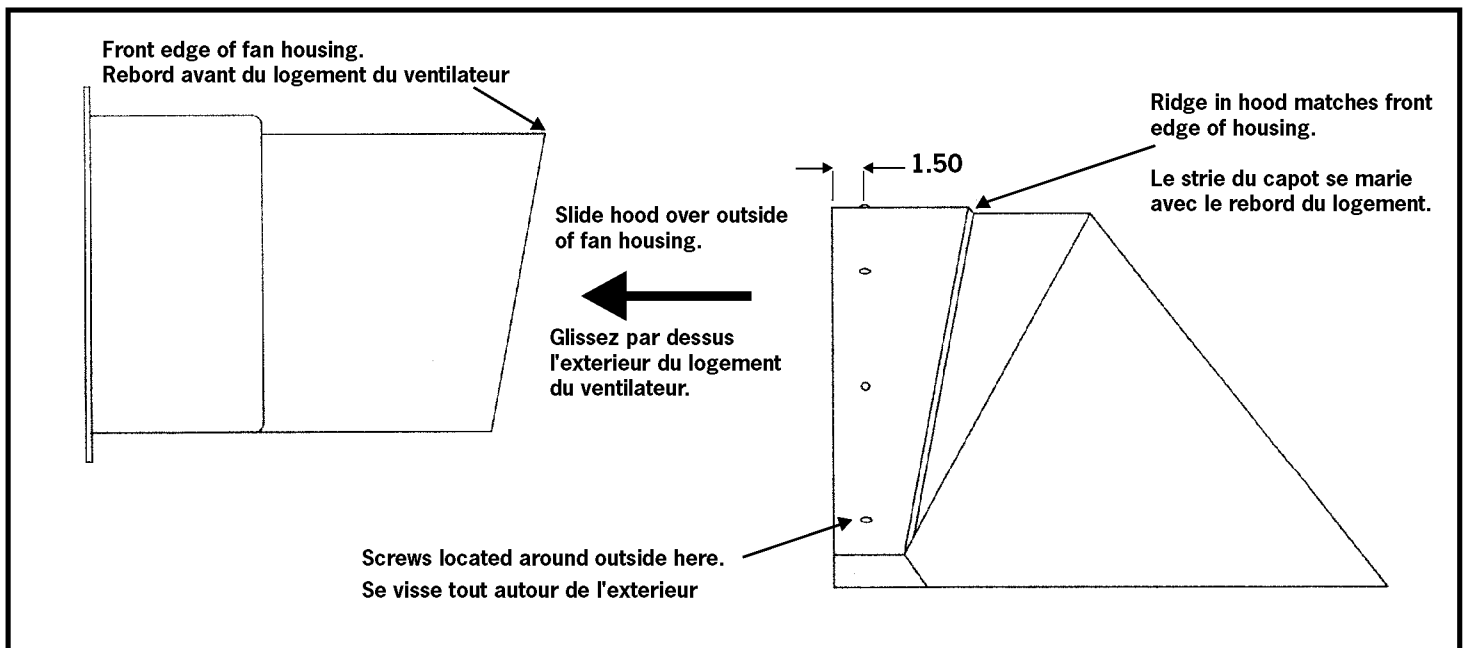

N.B.: LE CAPOT PEUT ETRE ASSEMBLE AU VENTILATEUR, AVANT OU APRES L'INSTALLATION AU MUR DU VENTILATEUR.

ASSEMBLAGE:

1. Glissez le capot sur le bout du logement du ventilateur tel qu'indiqué. La crête autour du capot devrait reposer autour du rebord du logement du ventilateur.
2. Fixez le capot au ventilateur a l'aide des vis fournis. Les vis devraient être localisées approximativement , 1 1/2" du rebord du ventilateur tel qu'indiqué.

**Installation or Product problems? Do not return to store of purchase.
Contact Canarm Service at 1-800-265-1833 (CANADA) 1-800-267-4427 (U.S.A.)
1-800-567-2513 (EN FRANCAIS) Monday to Friday 8:00 - 5:00pm e.s.t.**



CANARM LTD.
2157 PARKEDALE AVENUE
BROCKVILLE, ONTARIO K6V 5V6
TELEPHONE: (613) 342-5424
FAX: 1-800-263-4598
E-MAIL: agsales@canarm.ca

CANARM LTEE.
8500 RUE GRENACHE
ANJOU, QUEBEC H1J 2B1
TELEPHONE: (514) 353-2255
FAX: (514) 353-2522
E-MAIL: agsales@canarm.ca